


MENGVENTIEL AFSTELLEN

MIXING VALVE ADJUSTMENT

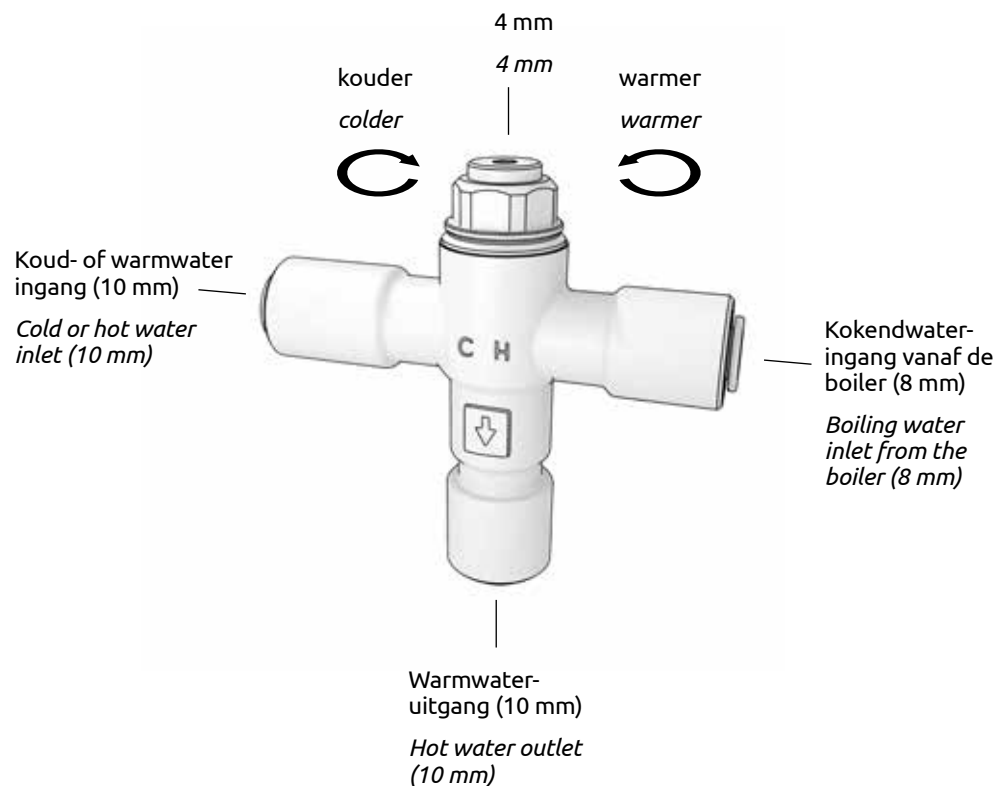

Dit mengventiel wordt toegepast in de Combi en Combi Extra installaties met de Selsiuz Classic boiler.

This mixing valve is used in the Combi and Combi Extra installations with the Selsiuz Classic boiler.

TEMPERATUUR INSTELLEN TEMPERATURE ADJUSTMENT

De temperatuur op het mengventiel kan ingesteld worden met een 4mm inbussleutel. De instelling op het mengventiel is geen exacte uitgaande warmwatertemperatuur, maar een mengverhouding. De exacte temperatuurinstelling verschilt per situatie, elke volledige rotatie (360° draaien) van de inbussleutel resulteert in een aanpassing van ca. 8°C.

The temperature of the mixing valve can be adjusted with a 4 mm Allen key. The setting on the mixing valve is not an exact outgoing hot water temperature, but a mixing ratio. The exact temperature setting varies per installation; each full rotation (360° turn) of the Allen key results in an adjustment of approx. 8°C.

TEMPERATUUROVERZICHT TEMPERATURE OVERVIEW

Standaard instelling <i>Default setting</i>	55°C*
Laagste temperatuur <i>Lowest temperature</i>	30°C
Hoogste temperatuur <i>Highest temperature</i>	65°C

* De ingestelde uitgaande warmwatertemperatuur kan in de praktijk afwijken op basis van drukverschillen en verschil in temperatuur van het inkomende water.

** The set outgoing hot water temperature may vary in practice depending on pressure differences and the temperature of the incoming water.*

TECHNISCHE SPECIFICATIES TECHNICAL SPECIFICATIONS

Temperatuurbereik <i>Temperature range</i>	30-65°C
Maximale druk <i>Maximum pressure</i>	8 bar
Minimale flow rate <i>Minimum flow rate</i>	2L/min
Maximale flow rate <i>Maximum flow rate</i>	12L/min

088 - 233 55 33
INFO@SELSIUZ.COM
WWW.SELSIUZ.COM

selsiuz